


Aspen Evolution EFD 1000 PFD Quick Guide

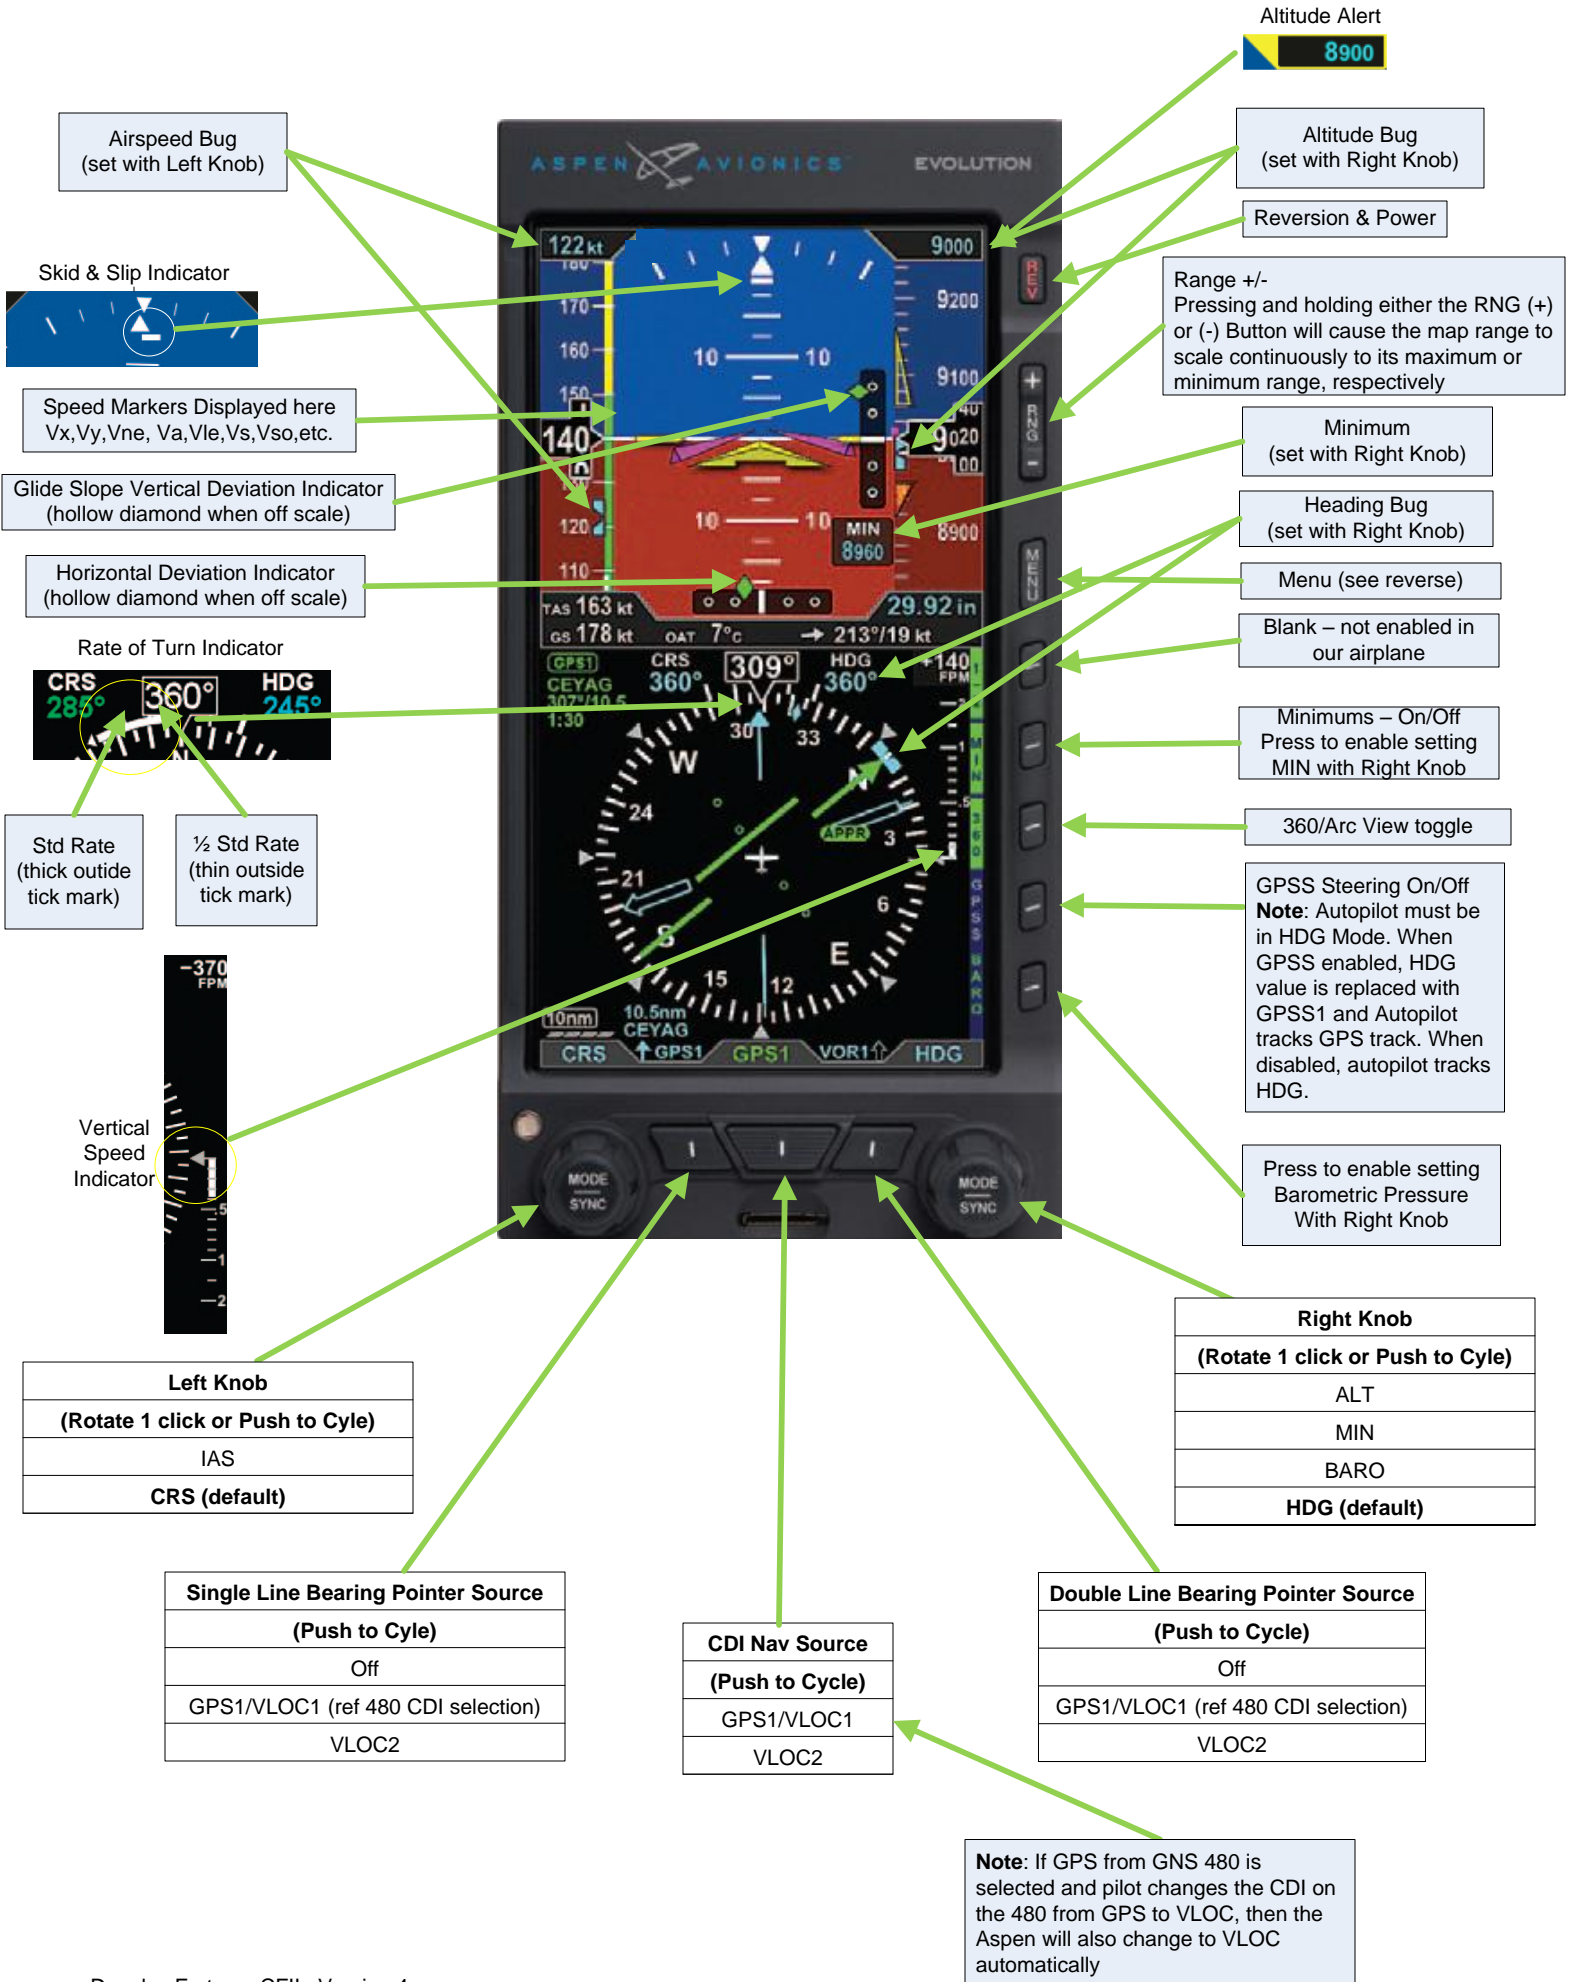

Left Knob		Default after 10 seconds: CRS	
	SYNC Action		Manual Action
Press to cycle through:	Press and Hold for >1 second		Active Mode = Magenta Inactive Mode = Cyan
IAS	Sets Airspeed bug to current indicated airspeed		Rotate knob to desired setting
CRS	VOR Nav	Course Pointer points to the VOR	
	ILS Nav	Current heading	
	GPS	Course Pointer points to the active GPS waypoint	
	GPS AUTO CRS Enabled	No effect (always set to desired track in AUTO CRS mode)	No effect (always set to desired track in AUTO CRS mode)

Right Knob		Default after 10 seconds: HDG	
	SYNC Action		Manual Action
Press to cycle through:	Press and Hold for >1 second		Active Mode = Magenta Inactive Mode = Cyan
ALT	Alt Bug and Alerter set to current altitude		Rotate knob to desired setting
MIN	Sets MIN to the current altitude		
BARO	Sets baro to 29.92		
HDG	Sets HDG Bug to the current heading		

Display Brightness:
Push Menu Button then press Left Knob to toggle between:
Automatic – BRT AUTO
Manual – BRT ADJUST – rotate knob to desired brightness

Other Menu functions
Push Menu Button, Navigation Mode (SEL PAGE) is displayed. Rotate Right Knob to navigate through menu pages. Push Menu Key adjacent to Menu, use Right Knob to change value.
Press Menu Button to exit.

Menu Button:
General Settings A
 Display Airspeed and Altitude Tapes
 Radio Altitude
 Auto Course Select
 ARC Compass Mode
 AHRs Reset
General Settings B
 Barometric Pressure Setting UOM
 Outside Air Temperature UOM
 Not applicable
 Not applicable
 Auto Range
General Settings C
 MACH Display
 Altitude
 Speed
 Overspeed Warning Test
360° Map Settings
 360° Declutter Level
 360° Flight Plan
 360° Airports
 360° VOR's (High, Low, and Terminal)
 360° Intersections / NDB
ARC Amp Settings
 ARC Declutter level
 ARC Flight Plan
 ARC Airports
 ARC VOR's (High, Low, and Terminal)
 ARC Intersections / NDB

Menu Button:
V Speeds A
 V Speeds
 V_a
 V_{bg}
 V_{ref}
 V_r
V Speeds B
 V_x
 V_y
 V_{lo}
 V_{le}
Power Settings
 Check or Switch to Battery Power
 Check or Switch to External Power
 Restart
 External Power Source Voltage
 Battery Status
System Status
 Main App. Processor Software Version
 IO Processor Software Version
 Unit Serial Number